



**669**



DWG

PDF


**242**



DWG

PDF


**1373**



DWG

PDF


**2036**



DWG

PDF

**147**



DWG

PDF


**1796**



DWG

PDF


**1091**



DWG


PDF

**500**



PDF


**577**



DWG

PDF


**749**



DWG

PDF

**375**



DWG

PDF

**1634**



DWG

PDF

**1432**



DWG

PDF

**1576**



DWG

PDF


**1966**



DWG

PDF


**1452**

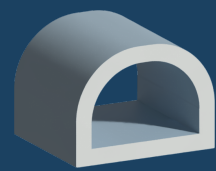

DWG

PDF


**2085**

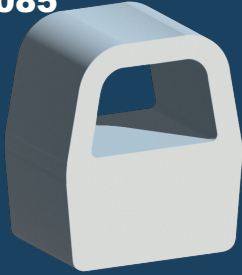

DWG

PDF


**2071**

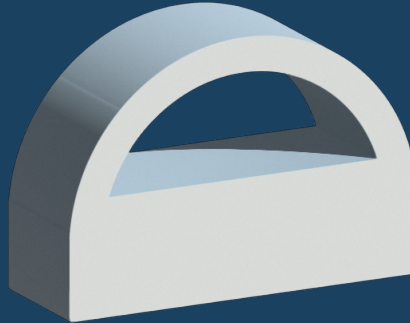

DWG

PDF


**848**

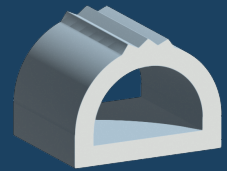

DWG

PDF


**559**

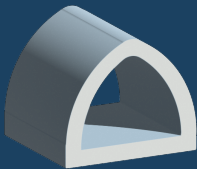

DWG

PDF


**221**

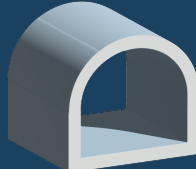

DWG

PDF


**549**

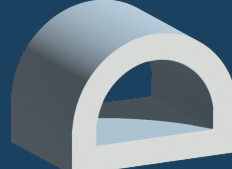

DWG

PDF


**1093**

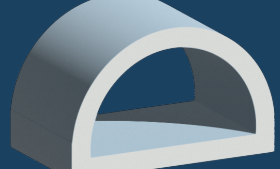

DWG

PDF


**726**

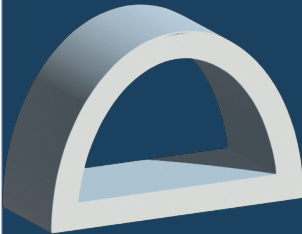

DWG

PDF


**1092**

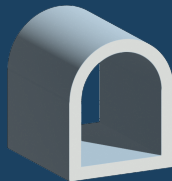

DWG

PDF

**1520**

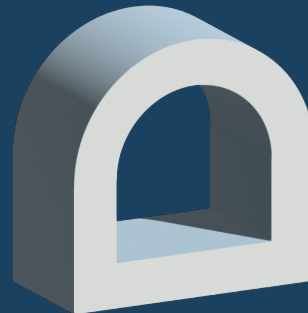

DWG

PDF


**1555**



DWG

PDF

**1581**



DWG

PDF

**2033**



**490**



DWG

PDF

**586**



DWG

PDF

**1358**



DWG

PDF

**1613**



DWG

PDF


**1540**



DWG

PDF

**1390**



DWG

PDF


**605**



DWG

PDF


**1712**



DWG

PDF


**1809**



DWG

PDF


**1886**



DWG

PDF


**2123**



DWG

PDF

**1101**

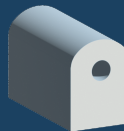

DWG

PDF

**2124**



DWG

PDF


**522**



DWG

PDF


**1141**

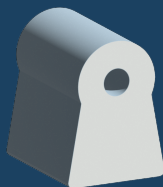

DWG

PDF


**341**

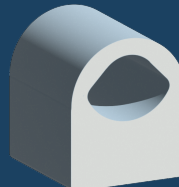

DWG

PDF


**974**

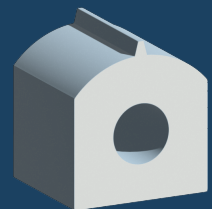

DWG

PDF

**1304**

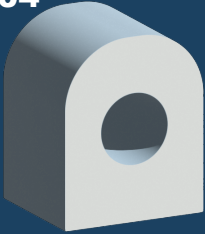

DWG

PDF


**747**



DWG

PDF


**1770**

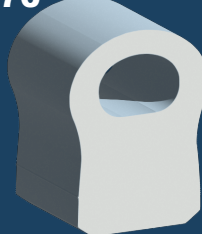

DWG

PDF

**1737**

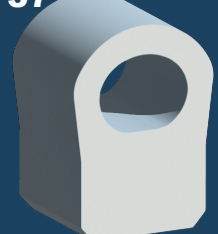

DWG

PDF

**1831**



DWG

PDF