

1053



DWG

PDF


434



DWG

PDF

1454

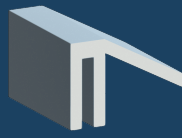

DWG

PDF


1396



DWG

PDF


459

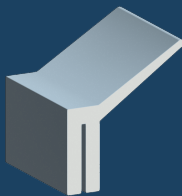

DWG

PDF


755

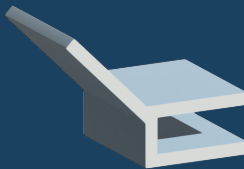

DWG

PDF


564

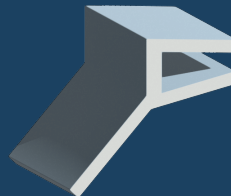

DWG

PDF

975

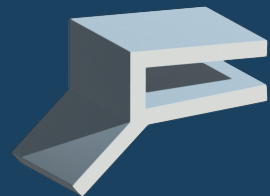

DWG

PDF


882



DWG

PDF

1054



DWG

PDF

492



DWG

PDF

205



DWG

PDF


1687



DWG

PDF


1554

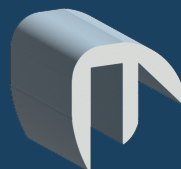

DWG


PDF

1568

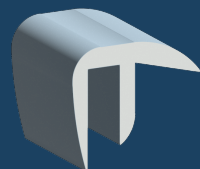

DWG


1917

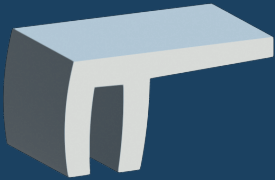

DWG

PDF


451

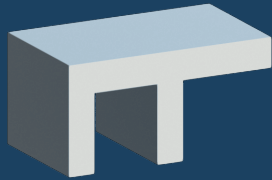

DWG

PDF


1738

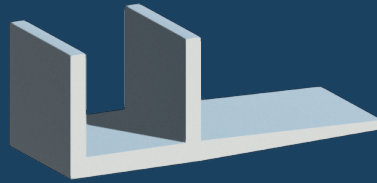

DWG

PDF


368

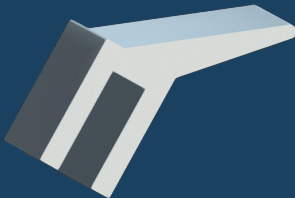

DWG

PDF


933

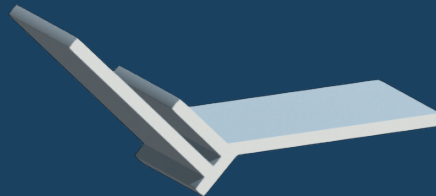

DWG

PDF


1436



DWG

PDF

1450



DWG

PDF


1435



DWG

PDF


1817



DWG

PDF


309

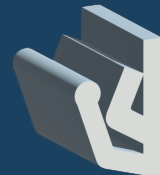

DWG

PDF


758

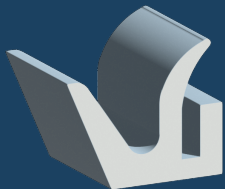

DWG

PDF


1756

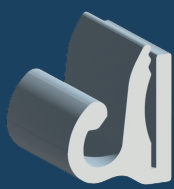

DWG

PDF


1848

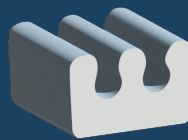

DWG

PDF

1849

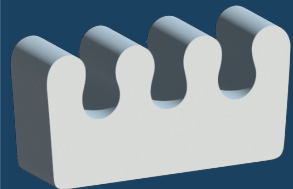

DWG

PDF

2122



DWG

PDF


475



DWG

PDF


1781

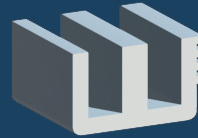

DWG

PDF


1718

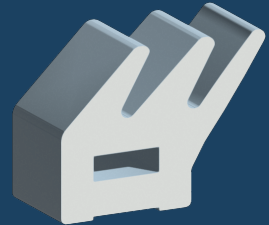

DWG

PDF


1311

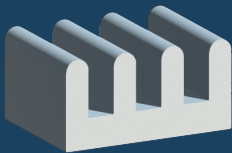

DWG

PDF


1325

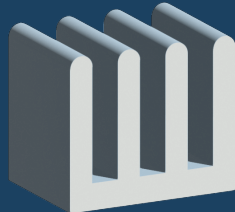

DWG

PDF


693

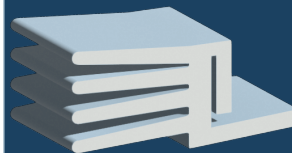

DWG

PDF


770

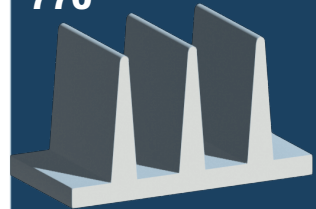

DWG

PDF


1447

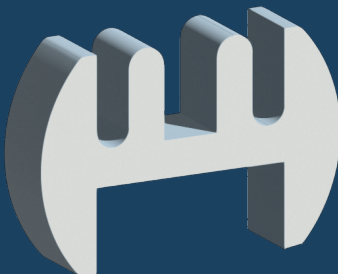

DWG

PDF


2460

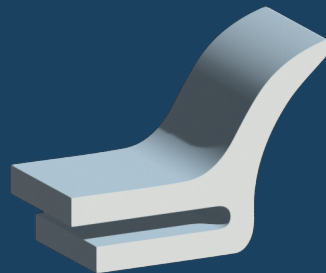

DWG

PDF

2439

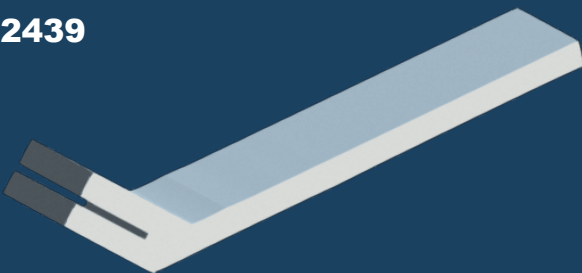

DWG

PDF