



471



DWG

PDF


1277



DWG

PDF


270



DWG

PDF


293



DWG

PDF


266



DWG

PDF


275



DWG

PDF


353



DWG

PDF


1352



DWG

PDF

774



DWG

PDF


223



DWG

PDF


239



DWG

PDF


860



DWG

PDF


184

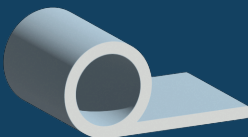

DWG

PDF


312

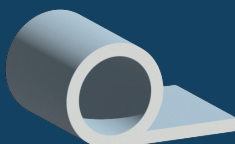

DWG

PDF


950

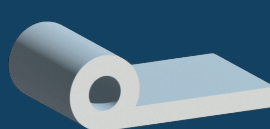

DWG

PDF


1391

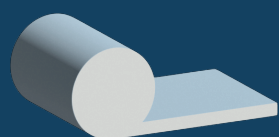

DWG

PDF

443

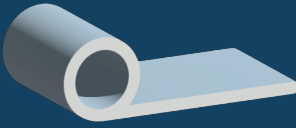

DWG

PDF

1235



DWG

PDF


953



DWG

PDF

519

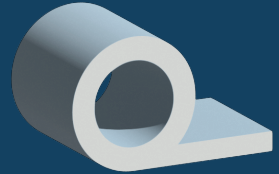

DWG

PDF

1423



DWG

PDF

857



DWG

PDF


1462



DWG

PDF


413

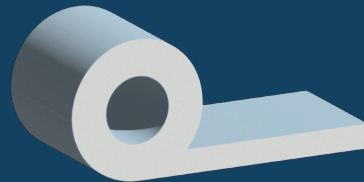

DWG

PDF


630

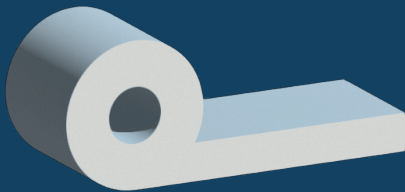

DWG

PDF


1549

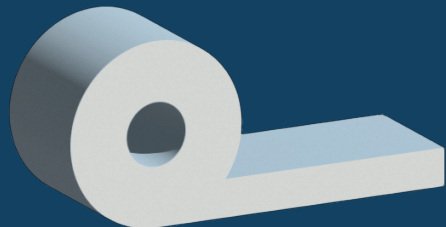

DWG

PDF


1616

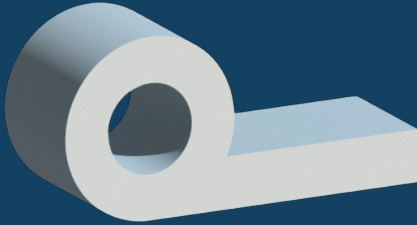

DWG

PDF


1632

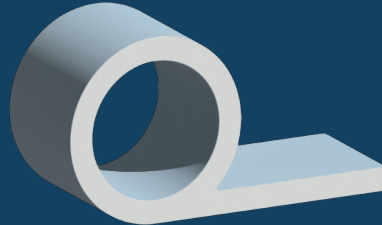

DWG

PDF


448

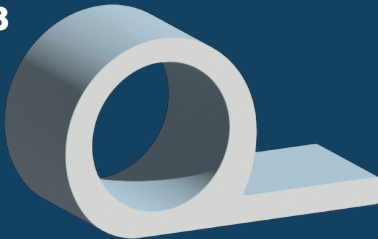

DWG

PDF

1222

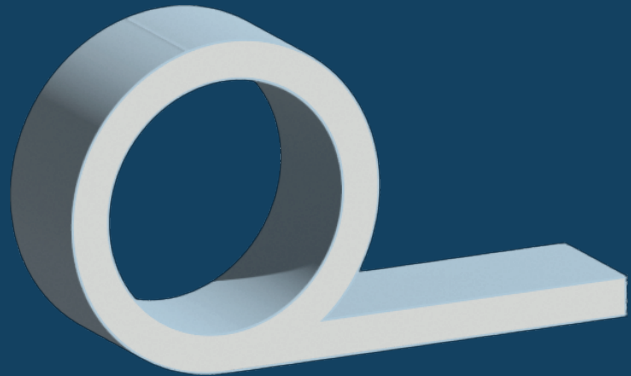

DWG

PDF


104



DWG

PDF


1797



DWG

PDF


256

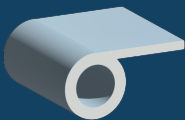

DWG

PDF


208

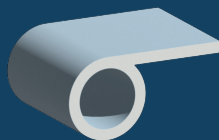

DWG

PDF


1919

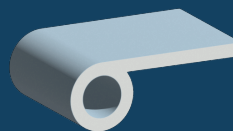

DWG

PDF


781

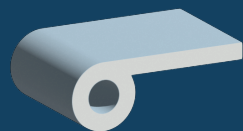

DWG

PDF


283



DWG

PDF


469



DWG

PDF


1661

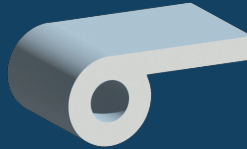

DWG

PDF


417

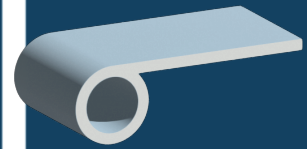

DWG

PDF


889

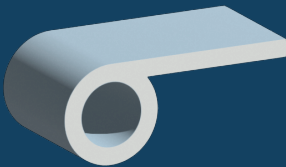

DWG

PDF


418

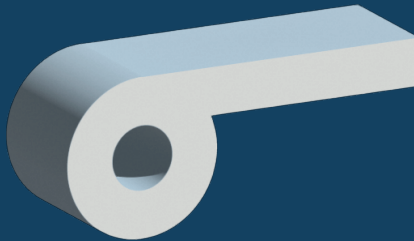

DWG

PDF


494



DWG

PDF


851

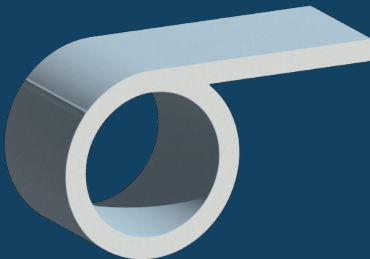

DWG

PDF

1971



DWG

PDF


1418



DWG

PDF


1187

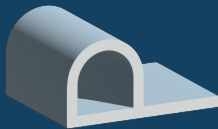

DWG

PDF

1814

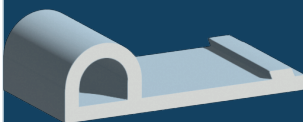

DWG

PDF

1047



DWG

PDF


571



DWG

PDF

657

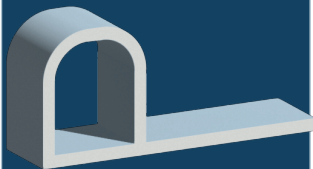

[DWG](#)

[PDF](#)


316



[DWG](#)

[PDF](#)

2084



[DWG](#)

[PDF](#)


2076



[DWG](#)

[PDF](#)


1852



[DWG](#)

[PDF](#)


2073

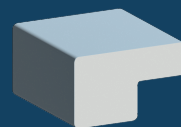

[DWG](#)

[PDF](#)


1642

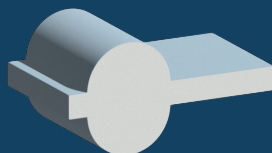

[DWG](#)

[PDF](#)


2037

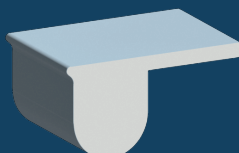

[DWG](#)

[PDF](#)


2029

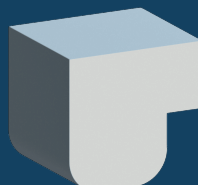

[DWG](#)

[PDF](#)


735



[DWG](#)

[PDF](#)


917

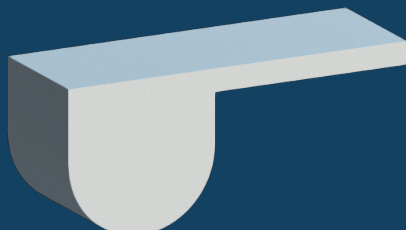

[DWG](#)

[PDF](#)


300

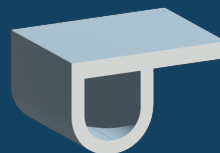

[DWG](#)

[PDF](#)


110

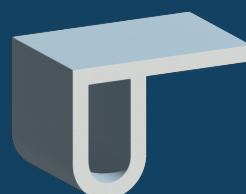

[DWG](#)

[PDF](#)


905



DWG

PDF


945

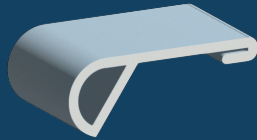

DWG

PDF


243

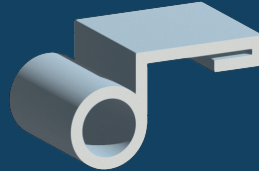

DWG

PDF


831

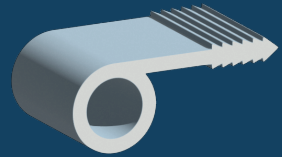

DWG

PDF


487

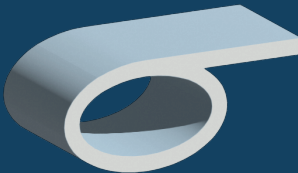

DWG

PDF


694

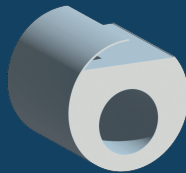

DWG

PDF


1910



DWG

PDF


633



DWG

PDF


1439



DWG

PDF


725



DWG

PDF


209

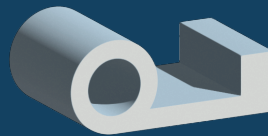

DWG

PDF


820

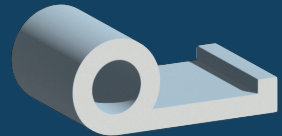

DWG

PDF


628

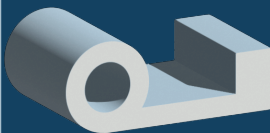

DWG

PDF

185

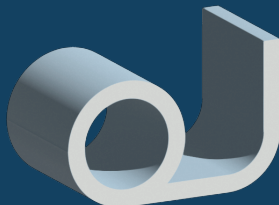

DWG

PDF


1198



DWG

PDF


928

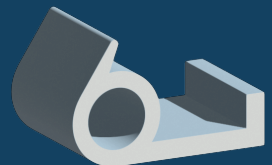

DWG

PDF


426

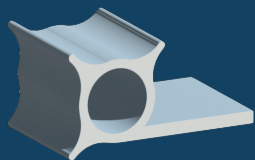

DWG

PDF


752

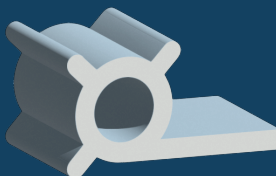

DWG

PDF


435

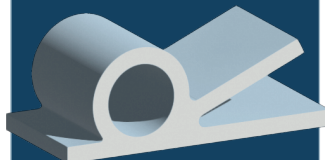

DWG

PDF


211



DWG

PDF

1918

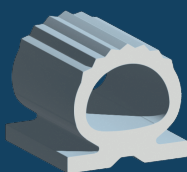

DWG

PDF


818



DWG

PDF


1976

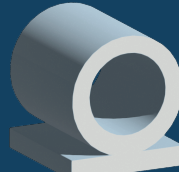

DWG

PDF


1952

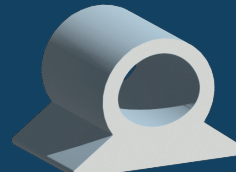

DWG

PDF


454

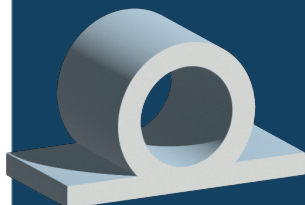

DWG

PDF


1934

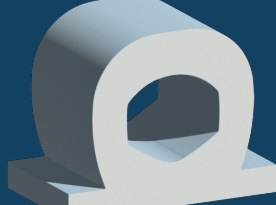

DWG

PDF


156



DWG

PDF


196



DWG

PDF


834



DWG

PDF


840



DWG

PDF


2069



DWG

PDF


1543



DWG

PDF


1213



[DWG](#)

[PDF](#)


838



[DWG](#)

[PDF](#)


1600

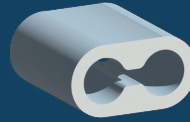

[DWG](#)

[PDF](#)


1599

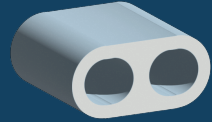

[DWG](#)

[PDF](#)


1424

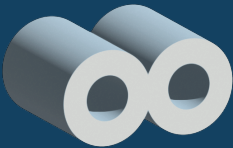

[DWG](#)

[PDF](#)


286



[DWG](#)

[PDF](#)


176

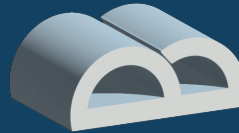

[DWG](#)

[PDF](#)


868

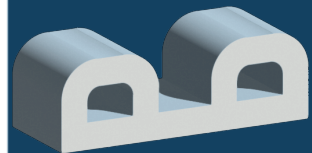

[DWG](#)

[PDF](#)


625

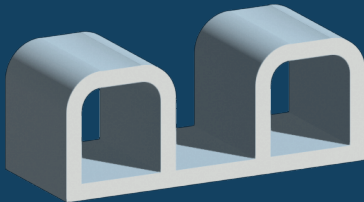

[DWG](#)

[PDF](#)


548

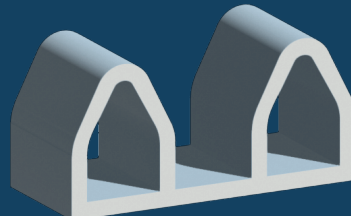

[DWG](#)

[PDF](#)


582

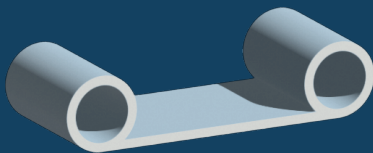

[DWG](#)

[PDF](#)


609

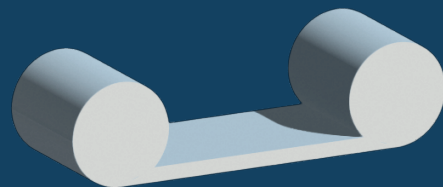

[DWG](#)

[PDF](#)


914

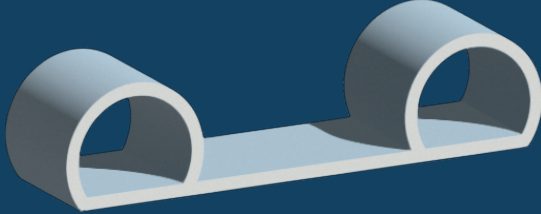

[DWG](#)

[PDF](#)


1459

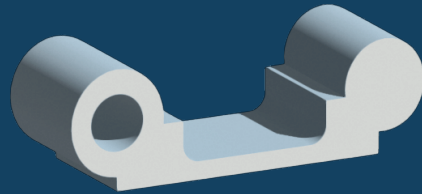

[DWG](#)

[PDF](#)

1507

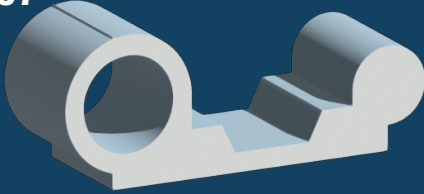

[DWG](#)

[PDF](#)


1500



[DWG](#)

[PDF](#)


1529



[DWG](#)

[PDF](#)

1296



[DWG](#)

[PDF](#)


1250



[DWG](#)

[PDF](#)


952



[DWG](#)

[PDF](#)


1626



[DWG](#)

[PDF](#)


482



[DWG](#)

[PDF](#)


431



[DWG](#)

[PDF](#)


1855

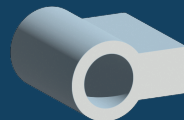

[DWG](#)

[PDF](#)


258

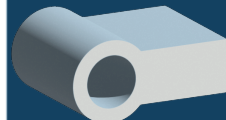

[DWG](#)


[PDF](#)

767

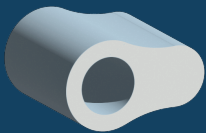

PDF


1691

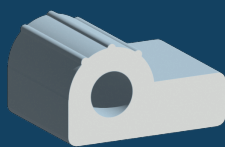

DWG

PDF


1789

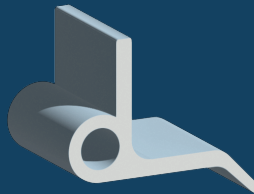

DWG

PDF


2109



DWG

PDF

1429

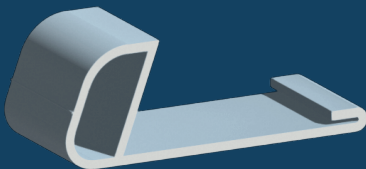

DWG

PDF

2086



DWG

PDF

1975



DWG

PDF

1944



DWG

PDF