



1547



DWG

PDF


768



DWG

PDF


2112

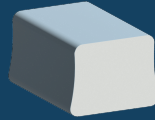

DWG

PDF


1050

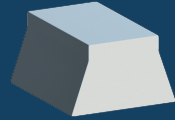

DWG

PDF


124

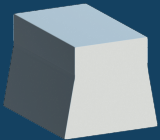

DWG

PDF


916

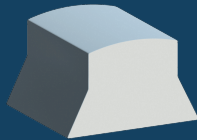

DWG

PDF


907

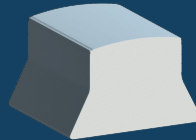

DWG

PDF


1857

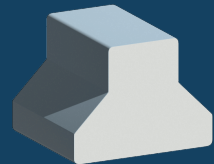

DWG

PDF


1377

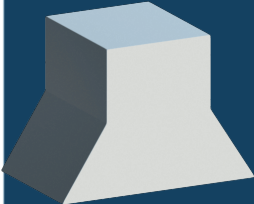

DWG

PDF


654



DWG

PDF


1139



DWG

PDF


406

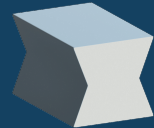

DWG

PDF


107

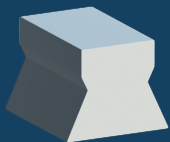

DWG

PDF


366

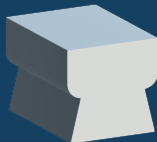

DWG

PDF


801

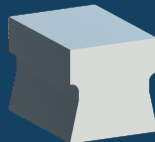

DWG

PDF

378

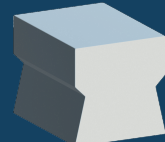

DWG

PDF


264



DWG

PDF


1138

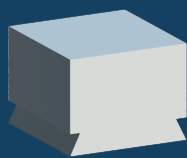

DWG

PDF


159

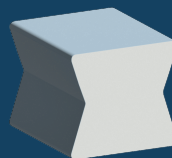

DWG

PDF


1112

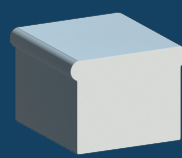

DWG

PDF


1153

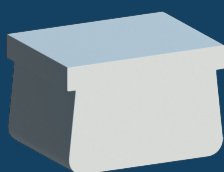

DWG

PDF


782

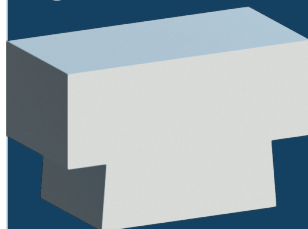

DWG

PDF


2387

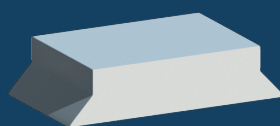

DWG

PDF


1516

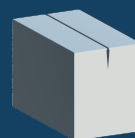

DWG

PDF


2048

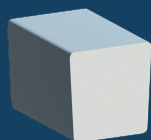

DWG

PDF


1682

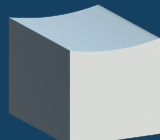

DWG

PDF

1676

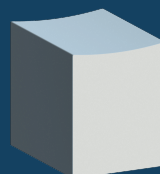

DWG

PDF


2403



DWG

PDF


474



DWG

PDF

1743

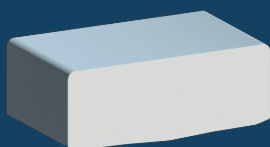

DWG

PDF

1786



DWG

PDF


2047



DWG

PDF


553



DWG

PDF


886

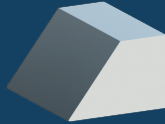

DWG

PDF


1693

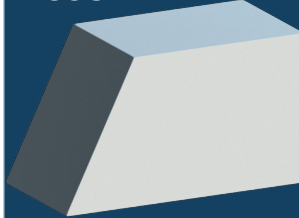

DWG

PDF


506

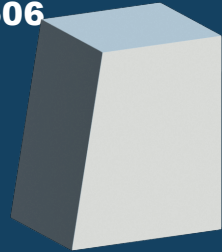

DWG

PDF


317

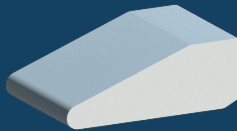

DWG

PDF


967

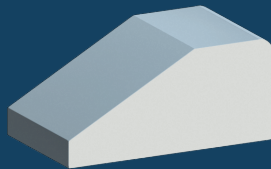

DWG

PDF


295

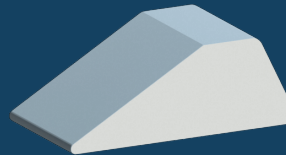

DWG

PDF


301

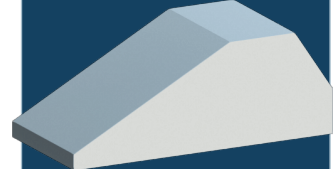

DWG

PDF

1479

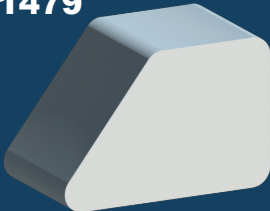

DWG

PDF


1070



DWG

PDF

1172

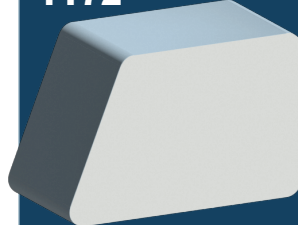

DWG

PDF


1746



DWG

PDF


276

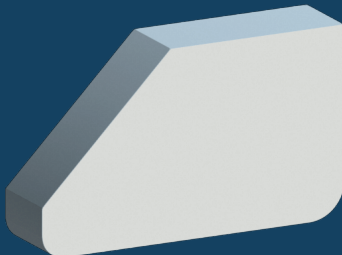

DWG

PDF


363

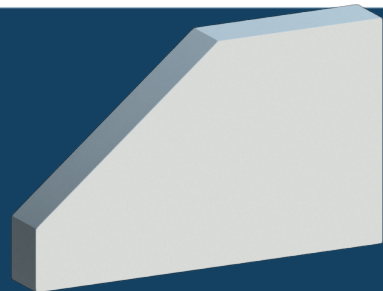

DWG

PDF


1264



DWG

PDF


277



DWG

PDF


911



DWG

PDF


1279



DWG

PDF


280



DWG

PDF


1475



DWG

PDF


343

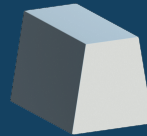

DWG

PDF


1647

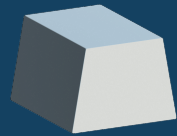

DWG

PDF


1678



DWG

PDF


919

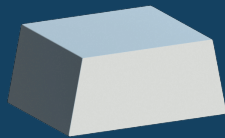

DWG

PDF


354

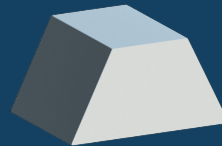

DWG

PDF


1754

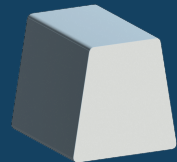

DWG

PDF


1545

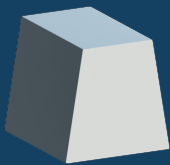

DWG

PDF

461

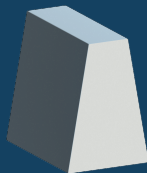

DWG

PDF


496



DWG

PDF


1216

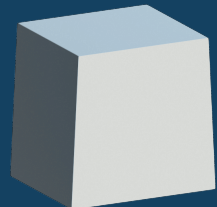

DWG

PDF


1646

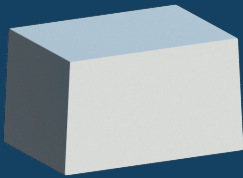

DWG

PDF


1819

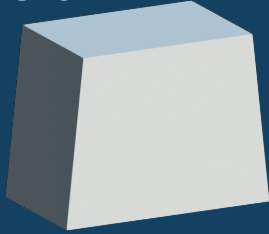

DWG

PDF


2399

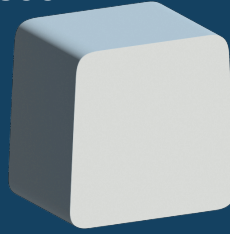

DWG

PDF

2121

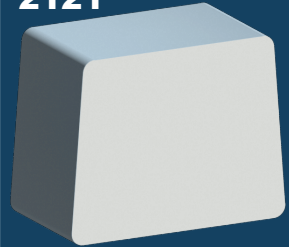

DWG

PDF


1603



DWG

PDF


1160

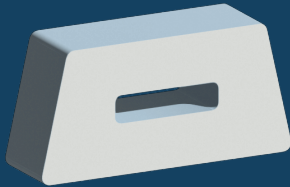

DWG

PDF


2128

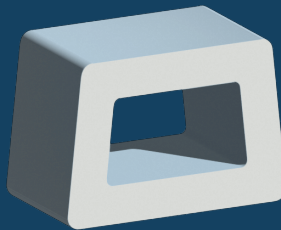

DWG

PDF


1062



DWG

PDF


837

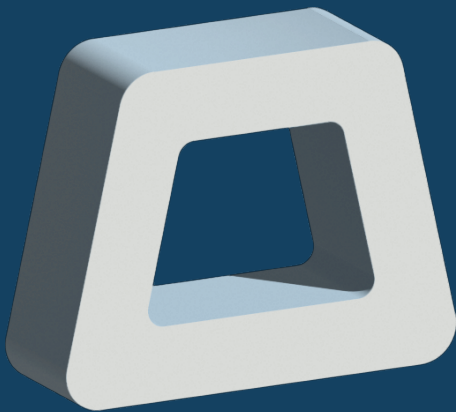

DWG

PDF


1656



DWG

PDF


1745



DWG

PDF


1777



DWG

PDF


544



DWG

PDF


450

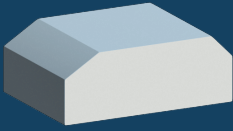

DWG

PDF


1007

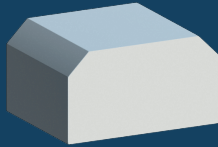

DWG

PDF


1167

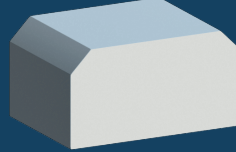

DWG

PDF


1008

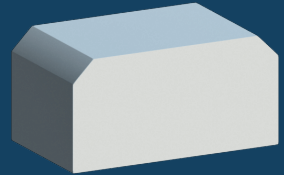

DWG

PDF


1211

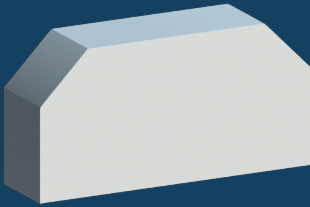

DWG

PDF


1005

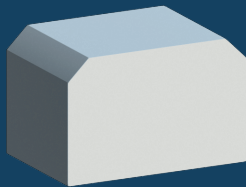

DWG

PDF


1006

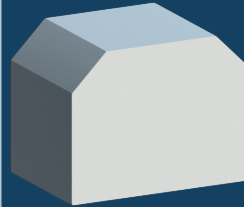

DWG

PDF


1165

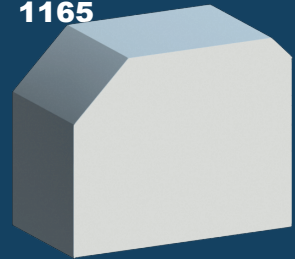

DWG

PDF

1166

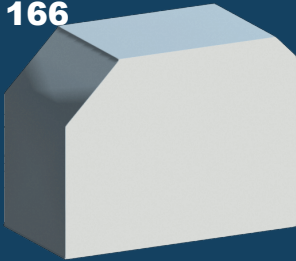

DWG

PDF


1003



DWG

PDF

1004

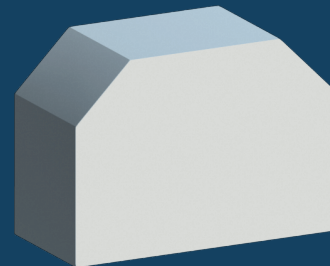

DWG

PDF


1506



DWG

PDF


1136

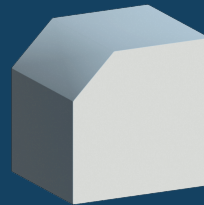

DWG

PDF

1258

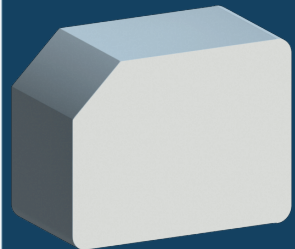

DWG

PDF




539



DWG

PDF


1932



DWG

PDF

402

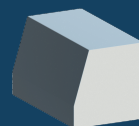

DWG

PDF

1014



DWG

PDF


1027



DWG

PDF


163

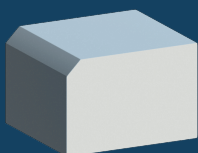

DWG

PDF


543

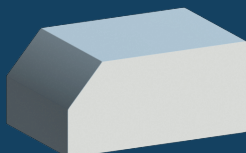

DWG

PDF


552

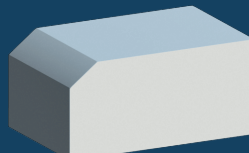

DWG

PDF


307

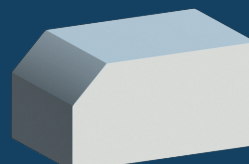

DWG

PDF


238

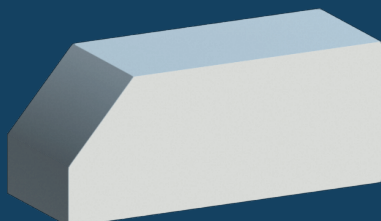

DWG

PDF


1263

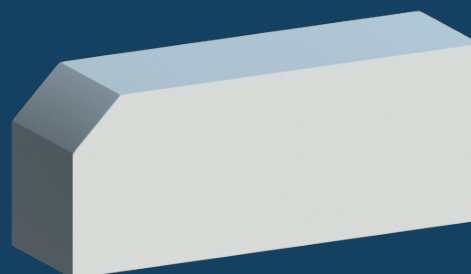

DWG

PDF


1136

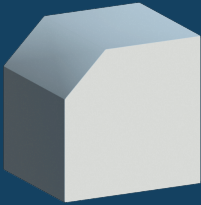

DWG

PDF


1258

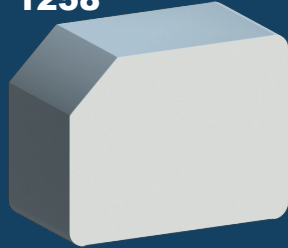

DWG

PDF


2061



DWG

PDF


502



DWG

PDF


322

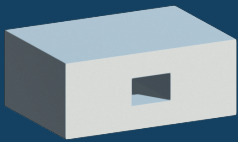

DWG

PDF


581

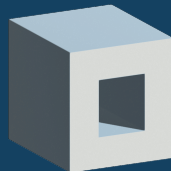

DWG

PDF


580

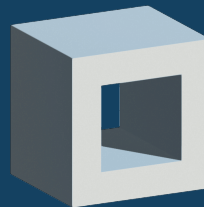

DWG

PDF


1409

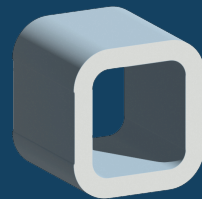

DWG

PDF


1605

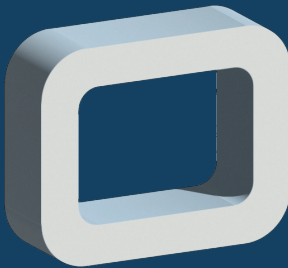

DWG

PDF


339

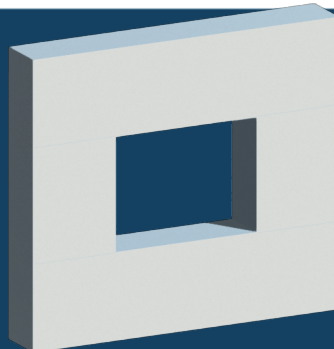

DWG

PDF


1839



DWG

PDF


1828



DWG

PDF


1813



DWG

PDF


1614

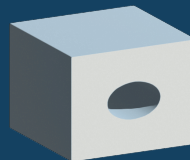

DWG

PDF


867

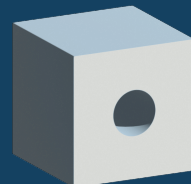

DWG

PDF


594

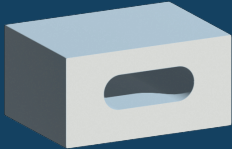

DWG

PDF


1023

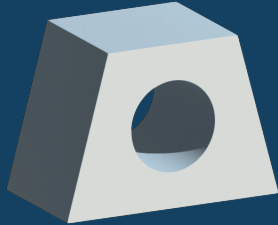

DWG

PDF


618

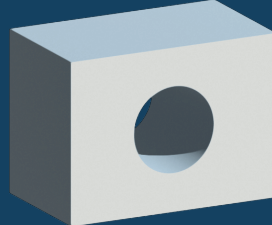

DWG

PDF


2361

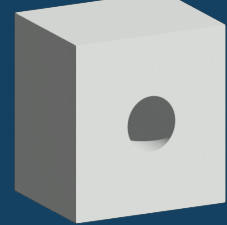

DWG

PDF


2380

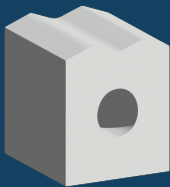

DWG

PDF


1434



DWG

PDF


287

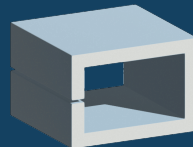

DWG

PDF


1147

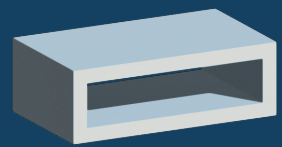

DWG

PDF


621

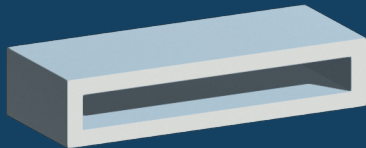

DWG

PDF


648

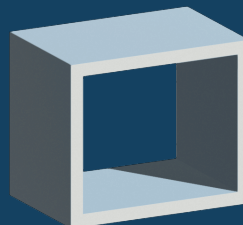

DWG

PDF


2435

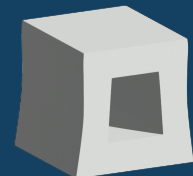

DWG

PDF


2420

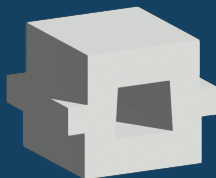

DWG

PDF


1204

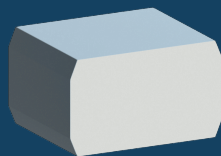

DWG

PDF


1938

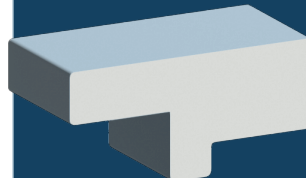

DWG

PDF


542

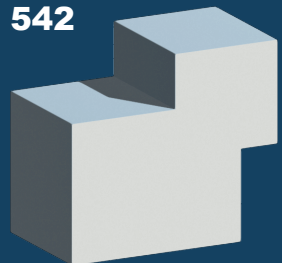

DWG

PDF


858

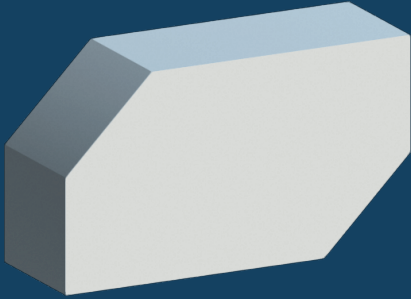

[DWG](#)

[PDF](#)


194

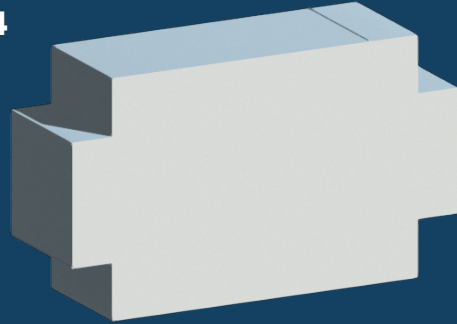

[DWG](#)

[PDF](#)

416

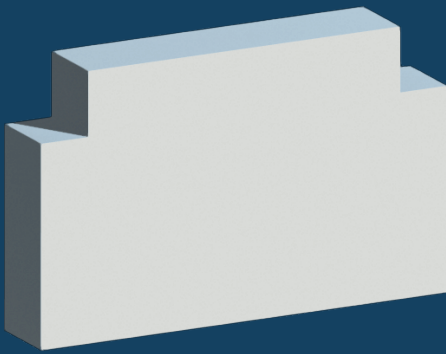

[DWG](#)

[PDF](#)


464



[DWG](#)

[PDF](#)

1386

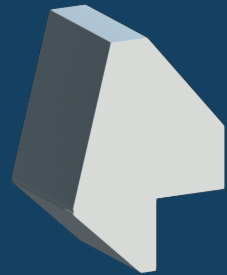

[DWG](#)

[PDF](#)