


1272



DWG

PDF

260



DWG

PDF


126



DWG

PDF


134



DWG

PDF


705



DWG

PDF


251



DWG

PDF


136



DWG

PDF

103



DWG

PDF

329



DWG

PDF


869



DWG

PDF

1548



DWG

PDF


1019



DWG

PDF

204



DWG

PDF


447



DWG

PDF

664

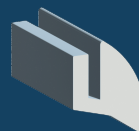

DWG

PDF


786



DWG

PDF


1134



DWG

PDF


1684



DWG

PDF


473



DWG

PDF

1256



DWG

PDF

722



DWG

PDF


470



DWG

PDF


855



DWG

PDF

964



DWG

PDF

708



DWG

PDF

732



DWG

PDF

1405



DWG

PDF


1362



DWG

PDF

1369

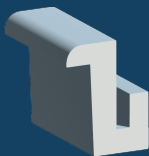

DWG

PDF

962



DWG

PDF


1367



DWG

PDF


880



DWG

PDF


879



DWG

PDF

1274



DWG

PDF


157



DWG

PDF


178

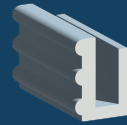

DWG

PDF


127



DWG

PDF


160

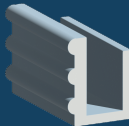

DWG

PDF


1026



DWG

PDF

1446



DWG

PDF


658



DWG

PDF


1474



DWG

PDF


455



DWG

PDF

1512



DWG

PDF

1333



DWG

PDF

653



DWG

PDF


566



DWG

PDF


624

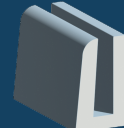

DWG

PDF


1309

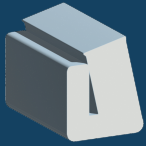

DWG

PDF

1759

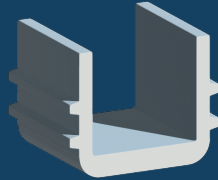

DWG

PDF


697



DWG

PDF


865

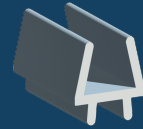

DWG

PDF

257



DWG

PDF


666



DWG

PDF


1218



DWG

PDF


254



DWG

PDF


971

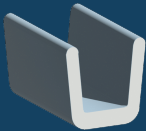

DWG

PDF


1040

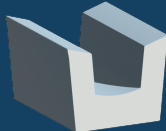

DWG

PDF


1025

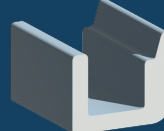

DWG

PDF


1720



DWG

PDF

1241

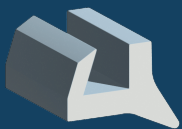

DWG

PDF


1286



DWG

PDF


1441

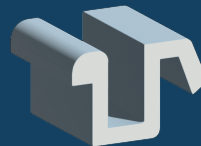

DWG

PDF

1082

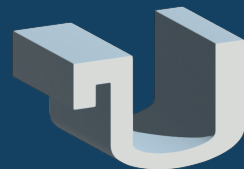

DWG

PDF


1788



DWG

PDF


222

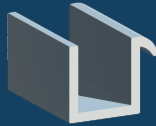

DWG

PDF

1793

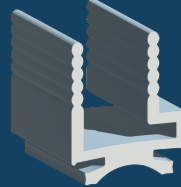

DWG

PDF

527



DWG

PDF

1514



DWG

PDF

1812



DWG

PDF

1267



DWG

PDF


1209



DWG

PDF

1242



DWG

PDF

1181



DWG

PDF

1049



DWG

PDF

972



DWG

PDF


1124



DWG

PDF

505

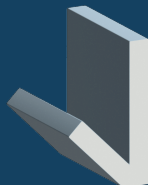

DWG

PDF

927



DWG

PDF

1840



DWG

PDF

1832



DWG

PDF

1744



DWG

PDF

1422



DWG

PDF

546



DWG

PDF

993



DWG

PDF

1343



DWG

PDF

1544



DWG

PDF

1057



DWG

PDF


920



DWG

PDF

961

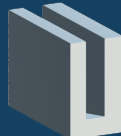

DWG

PDF

504



DWG

PDF

165



DWG

PDF

191



DWG

PDF

140



DWG

PDF

833



DWG

PDF

561



DWG

PDF

1470



DWG

PDF

403



DWG

PDF

271



DWG

PDF

493



DWG

PDF

560



DWG

PDF

1455



DWG

PDF


545



DWG

PDF


678



DWG

PDF


1002



DWG

PDF


201



DWG

PDF


294



DWG

PDF

780



DWG

PDF

556



DWG

PDF

1410



DWG

PDF


536



DWG

PDF


537

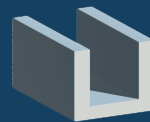

DWG

PDF

367

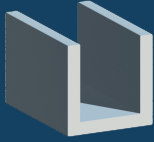

DWG

PDF

526



DWG

PDF


1230



DWG

PDF


1137

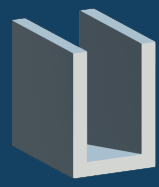

DWG

PDF


1523

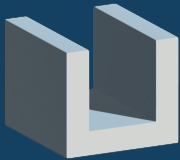

DWG

PDF


220

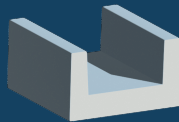

DWG

PDF


1178

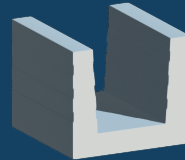

DWG

PDF


1332

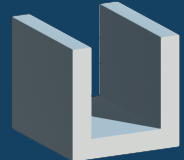

DWG

PDF


1106

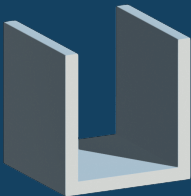

DWG

PDF


404

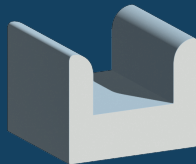

DWG

PDF

1750



DWG

PDF

1729



DWG

PDF


1758



DWG

PDF


1880

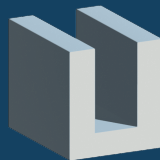

DWG

PDF


1248

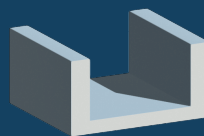

DWG

PDF

1503

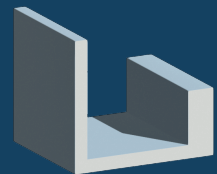

DWG

PDF

350



DWG

PDF

617



DWG

PDF

1085



DWG

PDF

710



DWG

PDF

711



DWG

PDF

332



DWG

PDF

206



DWG

PDF


570



DWG

PDF

1679

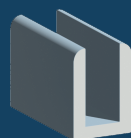

DWG

PDF

1673



DWG

PDF

304



DWG

PDF


452



DWG

PDF

146

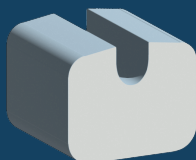

DWG

PDF


1297



DWG

PDF


237

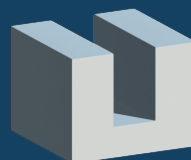

DWG

PDF


352

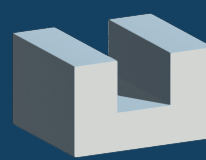

DWG

PDF


177

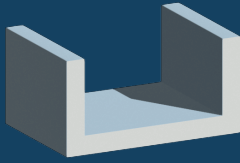

DWG

PDF


568

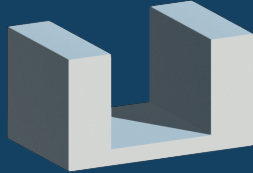

DWG

PDF

638

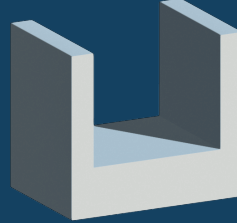

DWG

PDF

1820



DWG

PDF

965



DWG

PDF

1228



DWG

PDF


1269



DWG

PDF


662

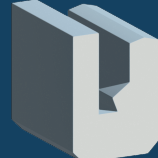

DWG

PDF


1530

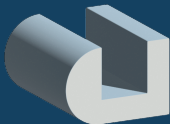

DWG

PDF


1324

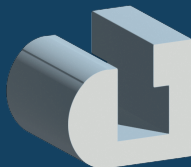

DWG

PDF


1251

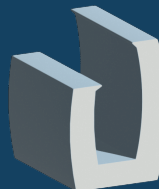

DWG

PDF


765

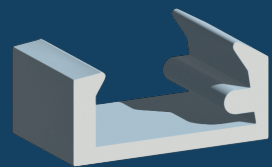

DWG

PDF


1566

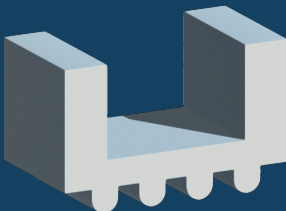

DWG

PDF

846

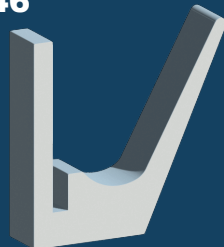

DWG

PDF


445



DWG

PDF


468



DWG

PDF


456



DWG

PDF


1736



DWG

PDF


1326

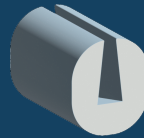

DWG

PDF


611

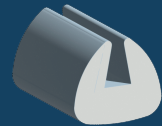

DWG

PDF

1563

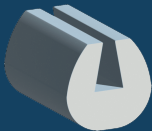

DWG

PDF

896



DWG

PDF

384



DWG

PDF

1456



DWG

PDF

909



DWG

PDF

884



DWG

PDF


1604



DWG

PDF

1020

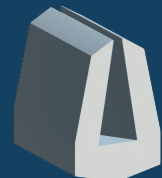

DWG

PDF


604



DWG

PDF

1822

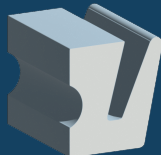

DWG

PDF

603



DWG

PDF

1499



DWG

PDF


808



DWG

PDF


1875



DWG

PDF


1807



DWG

PDF


467

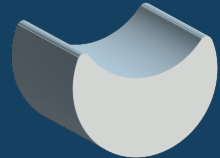

DWG

PDF

1298

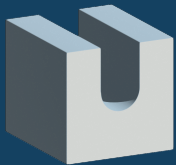

DWG

PDF


1152



DWG

PDF


1602

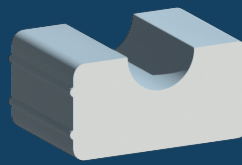

DWG

PDF

1596

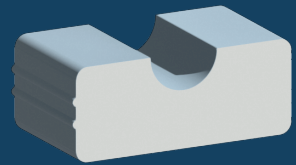

DWG

PDF


390



DWG

PDF


1553

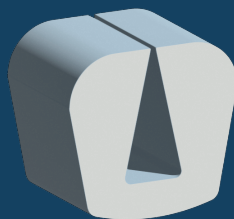

DWG

PDF


1328

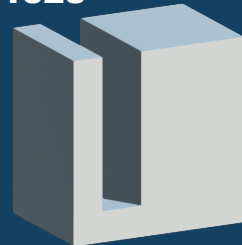

DWG

PDF


987

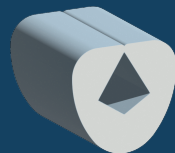

DWG

PDF


151

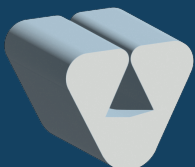

DWG

PDF


748

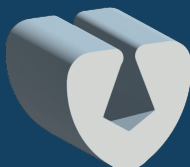

DWG

PDF

892

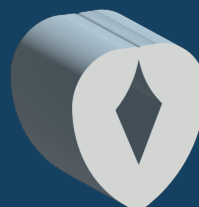

DWG

PDF

615



DWG

PDF


899



DWG

PDF

1589

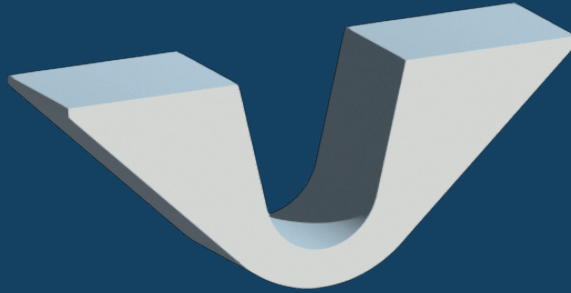

DWG

PDF

1791



DWG

PDF


1344



DWG

PDF


1689

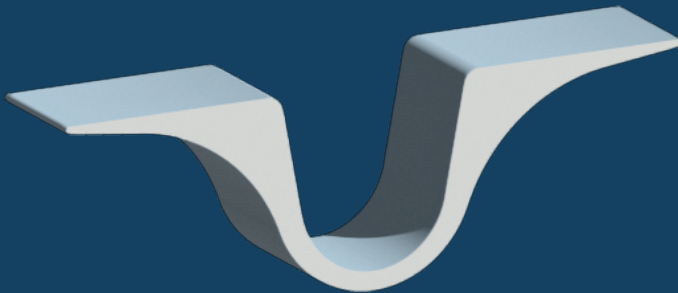

DWG

PDF


626

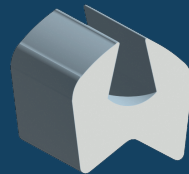

DWG

PDF


1174

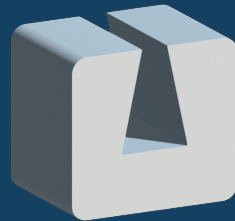

DWG

PDF


453

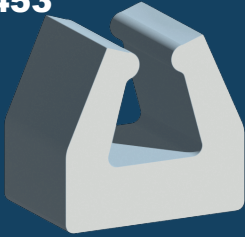

[DWG](#)

[PDF](#)


576

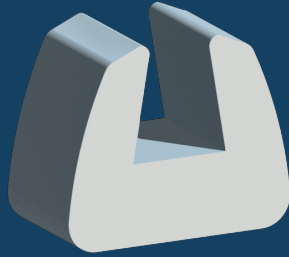

[DWG](#)

[PDF](#)


1246

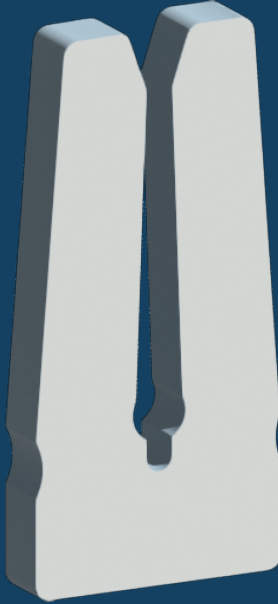

[DWG](#)

[PDF](#)


1843

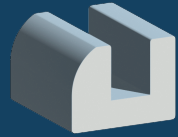

[DWG](#)

[PDF](#)


579

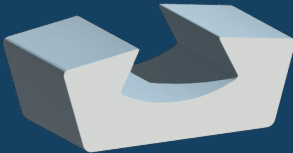

[DWG](#)

[PDF](#)


167

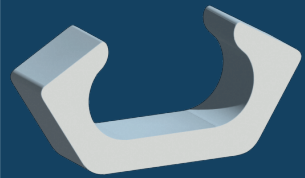

[DWG](#)

[PDF](#)


1083

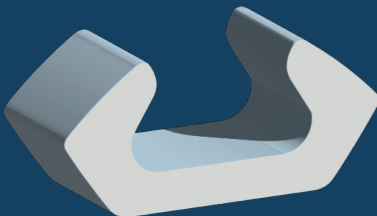

[DWG](#)

[PDF](#)


170

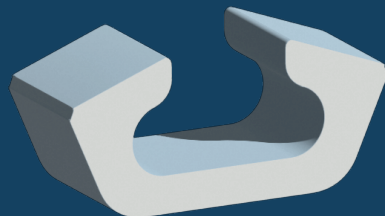

[DWG](#)

[PDF](#)


314

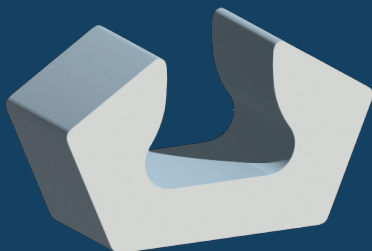

[DWG](#)

[PDF](#)


1363

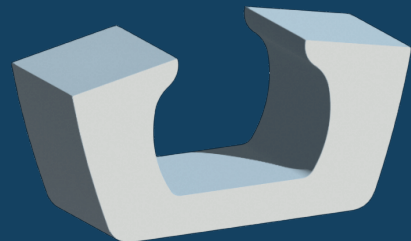

[DWG](#)

[PDF](#)

241

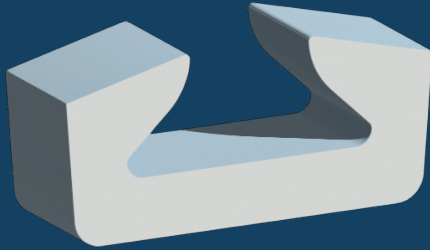

DWG

PDF


1699



DWG

PDF


1757

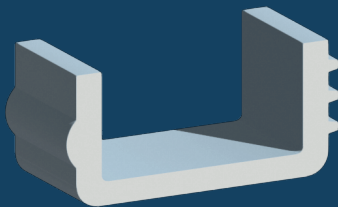

DWG

PDF

1316



DWG

PDF


1143



DWG

PDF


777



DWG

PDF


980



DWG

PDF


1308

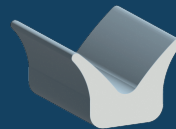

DWG

PDF


1275

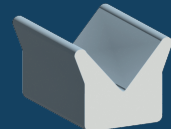

DWG

PDF


1640

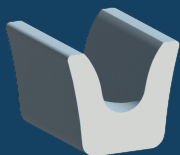

DWG

PDF


806

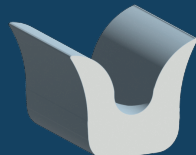

DWG

PDF


1245

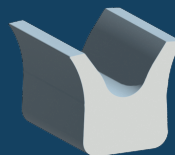

DWG

PDF

521

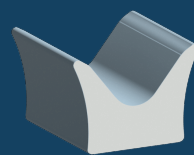

DWG

PDF

298



DWG

PDF

583



DWG

PDF


736



DWG

PDF


1175



DWG

PDF


1735

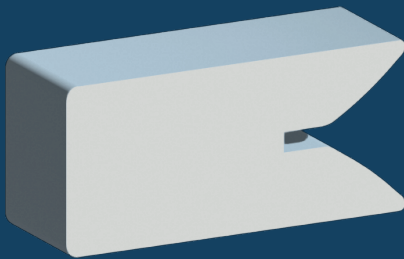

DWG

PDF


729

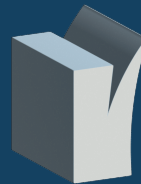

DWG

PDF


797

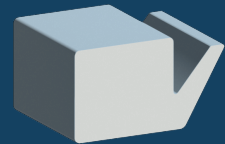

DWG

PDF


998

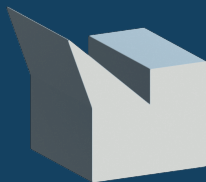

DWG

PDF


827

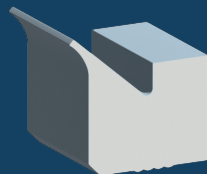

DWG

PDF


763

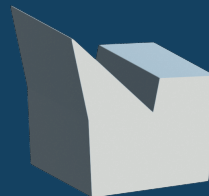

DWG

PDF

1476

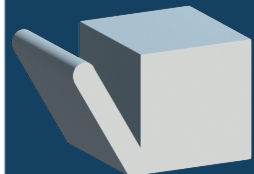

DWG

PDF


437



DWG

PDF


805

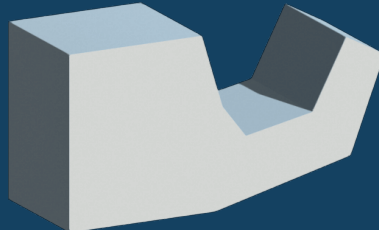

DWG

PDF


369

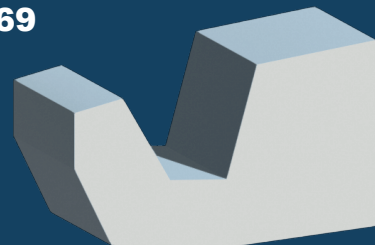

DWG

PDF


1719

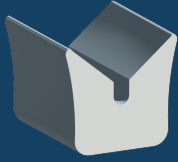

DWG

PDF


1151

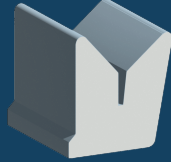

DWG

PDF


1501

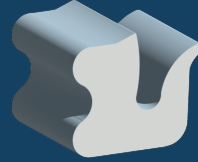

DWG

PDF


498

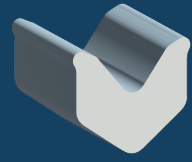

DWG

PDF


499

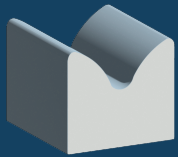

DWG

PDF


960

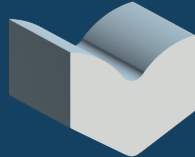

DWG

PDF


689

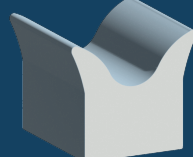

DWG

PDF

696

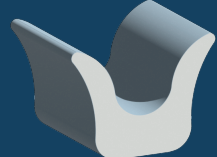

DWG

PDF

1346



DWG

PDF

695



DWG

PDF


1884



DWG

PDF

1043



DWG

PDF


255



DWG

PDF


565



DWG

PDF


1387

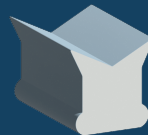

DWG

PDF


1162

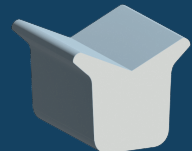

DWG

PDF


1084

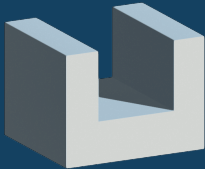

DWG

PDF


813

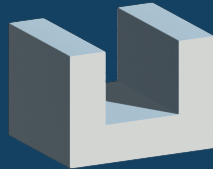

DWG

PDF


399

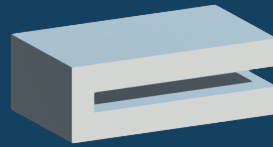

DWG

PDF


400

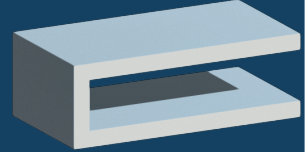

DWG


PDF

446

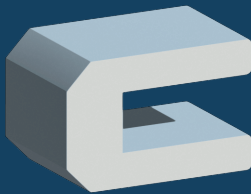

PDF


421

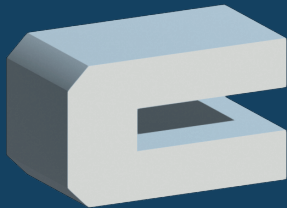

DWG

PDF


1126

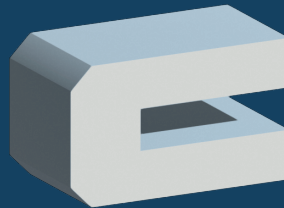

DWG

PDF


503

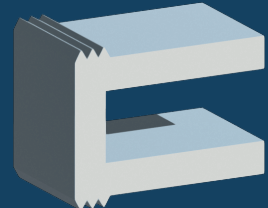

DWG

PDF


1374

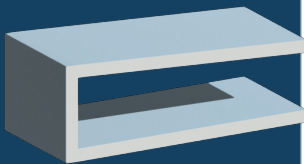

DWG

PDF


1063

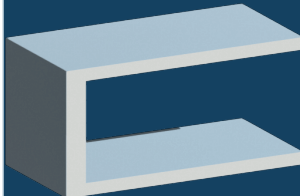

DWG

PDF


1044

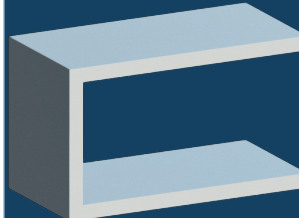

DWG

PDF


709



DWG

PDF


1675

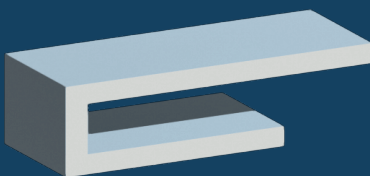

DWG

PDF


1406



DWG

PDF


1522



DWG

PDF


1541



DWG

PDF

1772



DWG

PDF


1284



DWG

PDF


982

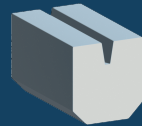

DWG

PDF


1266

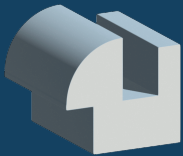

DWG

PDF

1087

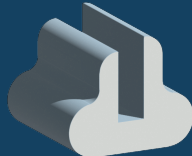

DWG

PDF


1042



DWG

PDF


1011

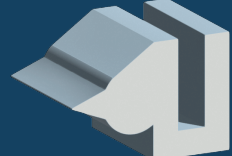

DWG

PDF


1345

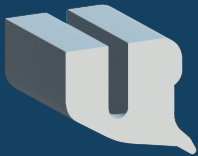

DWG

PDF


1261

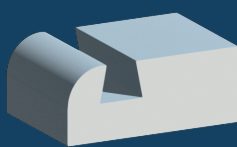

DWG

PDF


1624

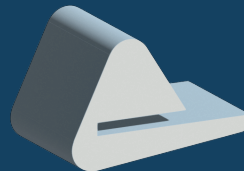

DWG

PDF


1393

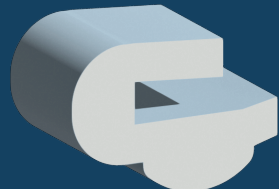

DWG

PDF


1385

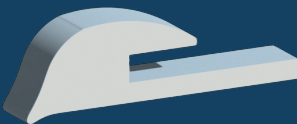

DWG

PDF


1641

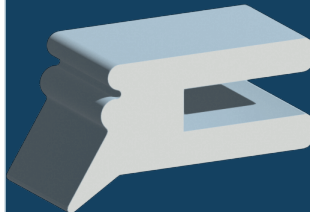

DWG

PDF


2105

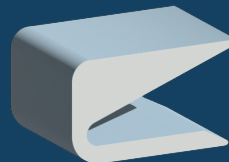

DWG

PDF

2079

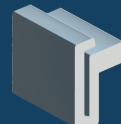

DWG

PDF

1871



DWG

PDF


1996



DWG

PDF

2096



DWG

PDF

1968



DWG

PDF


2015



DWG

PDF

2028



DWG

PDF


1854



DWG

PDF

1916

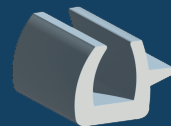

DWG

PDF

1870



DWG

PDF


2078



DWG

PDF


1928

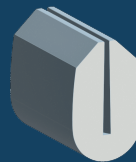

DWG

PDF


1904

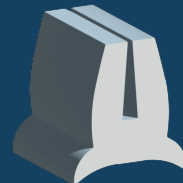

DWG

PDF

1961

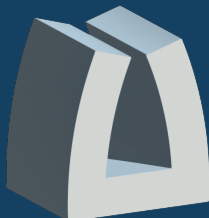

DWG

PDF

1858



DWG

PDF

1955



DWG

PDF


1949



DWG

PDF

2135

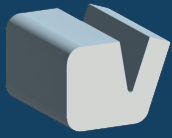

DWG

PDF

1869



DWG

PDF


2131



DWG

PDF

1925

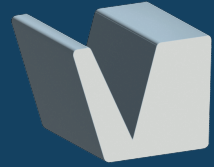

DWG

PDF


1425



DWG

PDF

1868

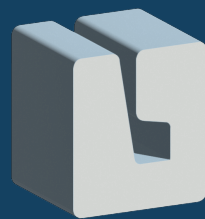

DWG

PDF


1915



DWG

PDF


1941



DWG

PDF


2025



DWG

PDF


1931

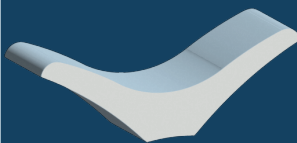

DWG

PDF


1700

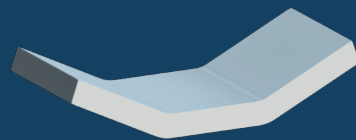

DWG

PDF

234

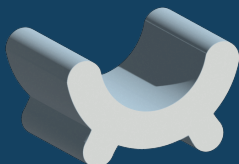

DWG

PDF


229



DWG

PDF


2068

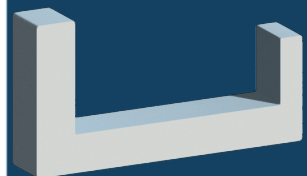

DWG

PDF


1902

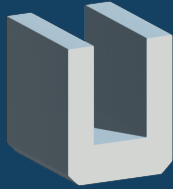

DWG

PDF

2005

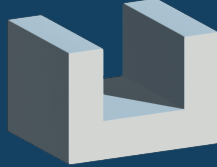

DWG

PDF


1981



DWG

PDF


2056

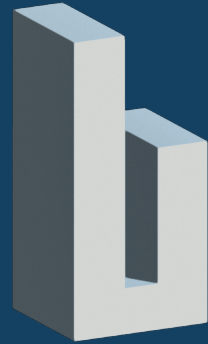

DWG

PDF


910

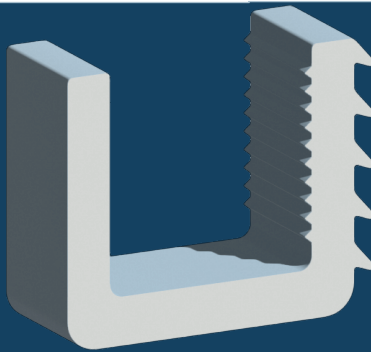

DWG

PDF


1637

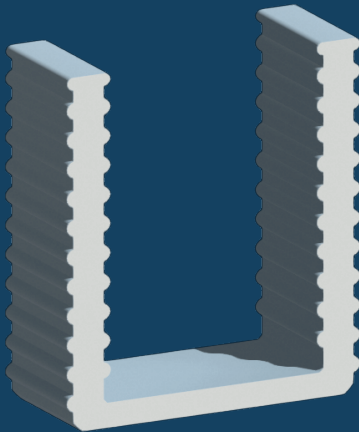

DWG

PDF


1740

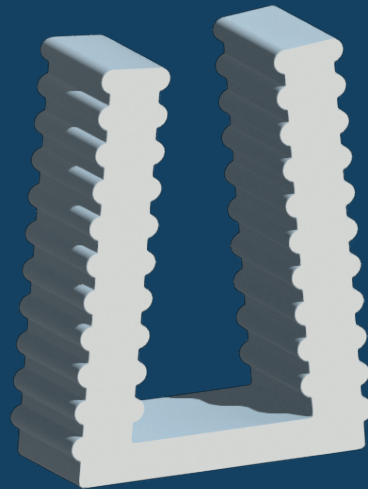

DWG

PDF


1638

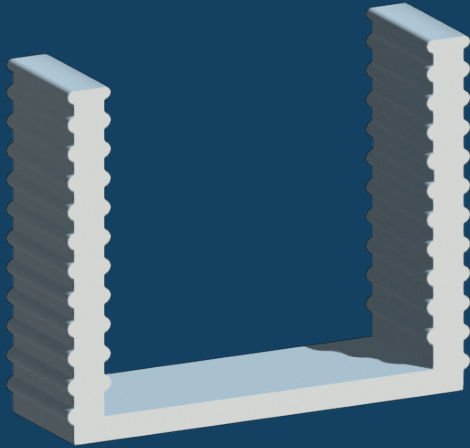

DWG

PDF

1741

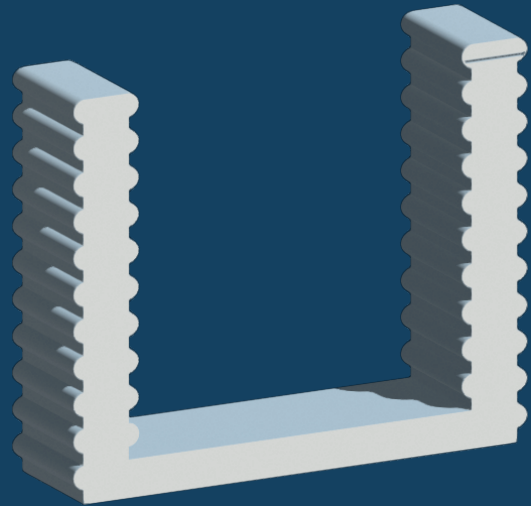


DWG

PDF


1411

DWG

PDF

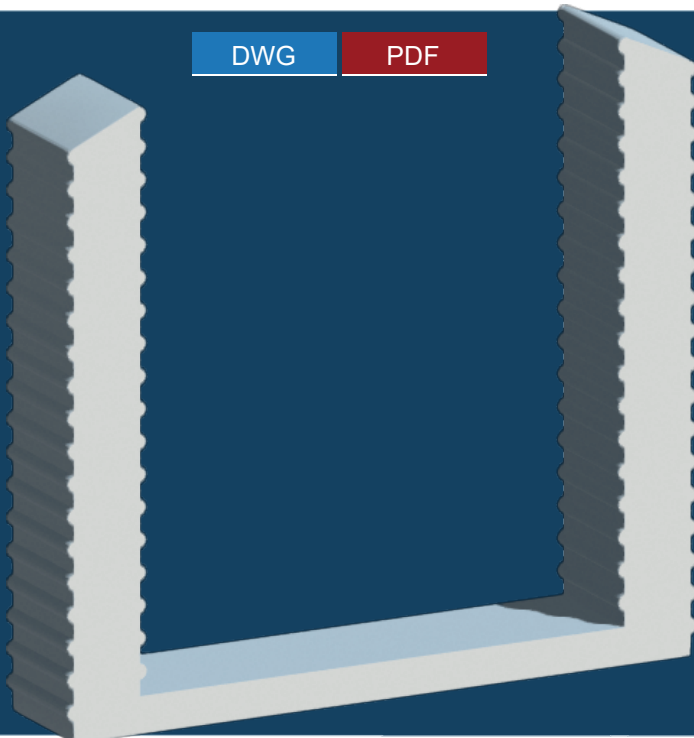

2136

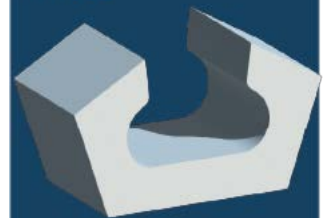

DWG

PDF