

2106



DWG

PDF


2000



DWG

PDF


978



DWG

PDF


1461



DWG

PDF

685



DWG

PDF

1595



DWG

PDF


2011



DWG

PDF


637

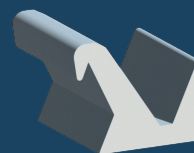

DWG

PDF

913

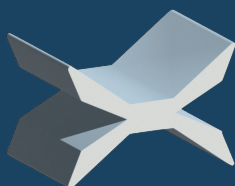

DWG

PDF


721



DWG

PDF

1190

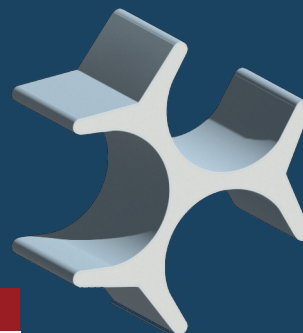

DWG

PDF

1847



DWG

PDF

1285



DWG

PDF


1914



DWG

PDF


389

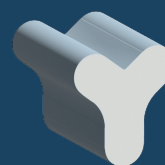

DWG

PDF


554

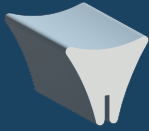

DWG

PDF


824

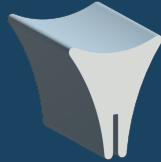

DWG

PDF


1380

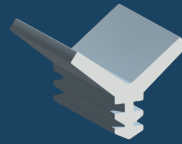

DWG

PDF

1967

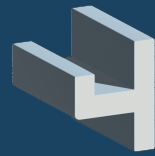

DWG

PDF

1972



DWG

PDF


1845



DWG

PDF

2091

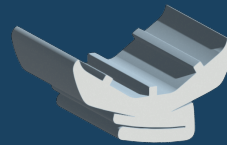

DWG

PDF

2054



DWG

PDF


663



DWG

PDF

486

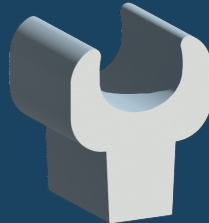

DWG

PDF


1338



DWG

PDF

555

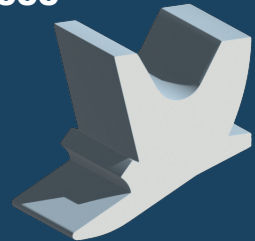

DWG

PDF

1071



DWG

PDF

1947



DWG

PDF


1130



DWG

PDF


1364

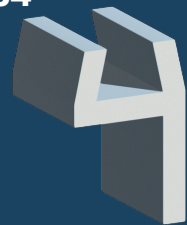

DWG

PDF


2101

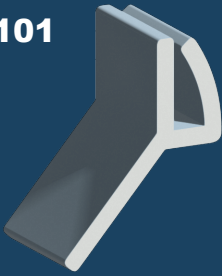

[DWG](#)

[PDF](#)

2093

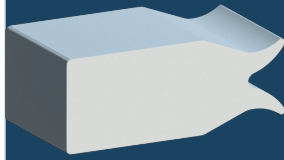

[DWG](#)

[PDF](#)


1980



[DWG](#)

[PDF](#)


489

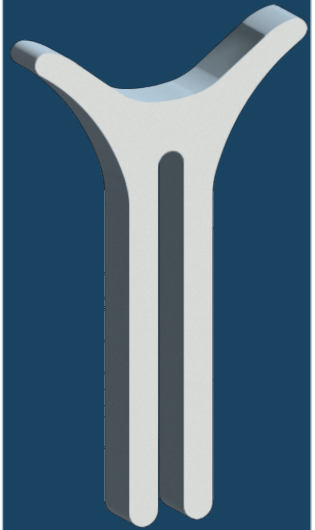

[DWG](#)

[PDF](#)

1430

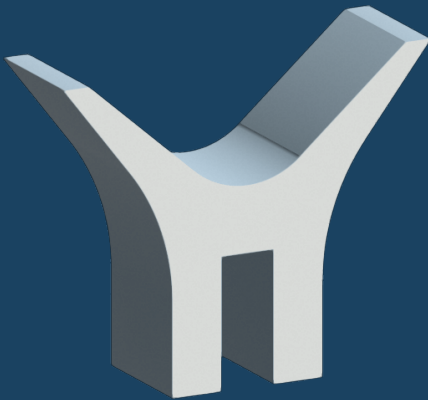

[DWG](#)

[PDF](#)

622



[DWG](#)

[PDF](#)